

Building Height

NAME _____

1. Choose which partner will be the measurer and which will be the helper. Complete the table by first measuring accurately according to the instructions, and then recording your results.


| EYE-LEVEL HEIGHT (IN INCHES) | DISTANCE FROM BUILDING (IN INCHES) | HEIGHT OF BUILDING (IN INCHES) | HEIGHT OF BUILDING (IN FEET) |
|---------------------------------|--|-----------------------------------|---------------------------------|
| | | | |

Eye-Level Height

Use the tape measure to measure the height from the eyes of the measurer to the ground. This measurement should be rounded to the nearest inch.

Distance from Building

1. The measurer should hold the clinometer so that the highest point of the building to be measured is visible through the straw.
2. The helper should now instruct the measurer to move backward or forward, until the angle measurement on the clinometers reads 45° . The measurer should make sure to keep the top of the building in sight through the straw while moving.
3. Measure the distance on the ground between the measurer and the building, in inches.

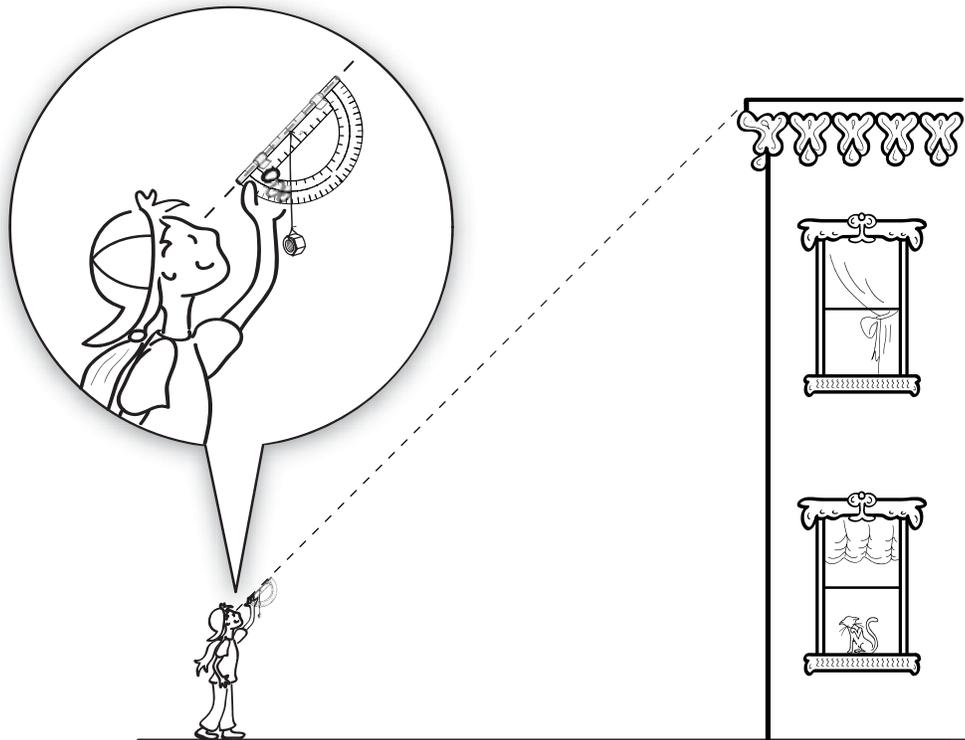

Height of Building

Add eye-level height to the distance-from-building measurement. Record this measurement in the third column of the table. Then convert the measurement to feet, and record this in the last column.

